
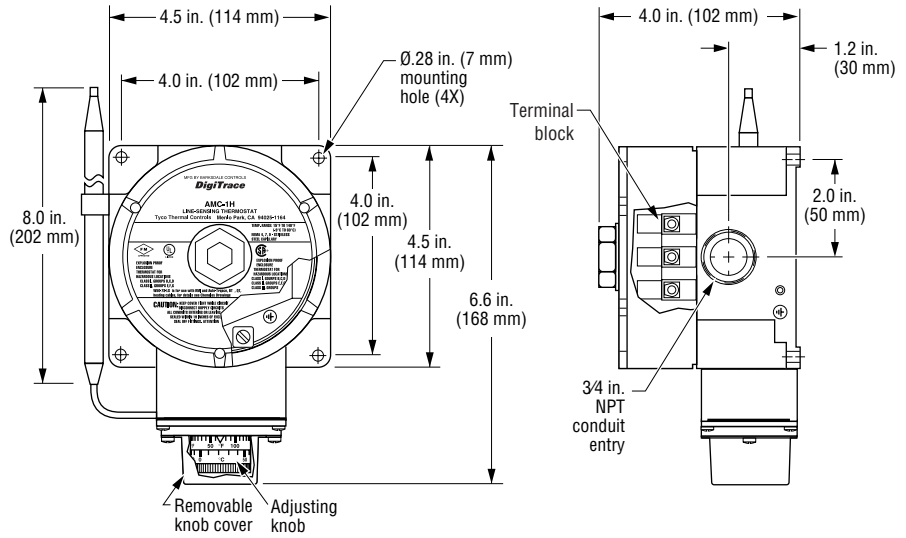


### Installation Instructions

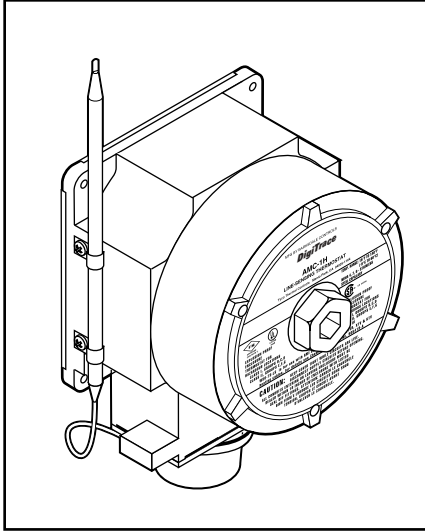

#### Description

The AMC-1H thermostat is designed for controlling freeze-protection heat-tracing circuits in hazardous locations. The thermostat

responds to ambient temperature changes. The AMC-1H can be used to control a heat-tracing circuit directly (see Figure 1 on back

page) or it can be used to control a contactor coil (see Figure 2).

#### Specifications

Enclosure	NEMA 4, 7, 9, lacquer-coated cast-aluminum housing, stainless-steel hardware
Entries	One 3/4" NPT conduit hub
Setpoint range	15°F to 140°F (-9°C to 60°C)
Sensor exposure limits	-40°F to 160°F (-40°C to 71°C)
Housing exposure limits	-40°F to 140°F (-40°C to 60°C)
Switch	SPDT
Electrical rating	22 A at 125/250/480 Vac
Accuracy	±6°F (±3.3°C)
Deadband	2°F to 12°F (1.1°C to 6.7°C) above actuation temperature
Setpoint repeatability	±3°F (±1.7°C)
Sensor type	Fluid-filled (silicone) bulb and 9 ft (2.7 m) capillary
Sensor material	300 series stainless steel
Connection terminals	Screw terminals, 10–14 AWG (2–5 mm <sup>2</sup> )

#### Approvals

##### Hazardous locations



Class I, Div. 1 and 2, Groups B, C, D  
Class II, Div. 1 and 2, Groups E, F, G  
Class III

#### ⚠ WARNING:


This component is an electrical device. It must be installed correctly to ensure proper operation and to prevent shock or fire. Read these

important warnings and carefully follow all the installation instructions. Component approvals and performance are

based on the use of specified parts only. Do not use substitute parts or vinyl electrical tape to make connections.

**AMC-1H Installation Instructions**

**Installing the Thermostat**

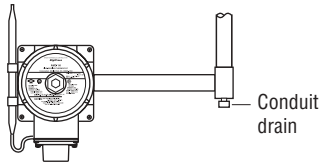

1. Verify that the thermostat is suitable for the area where it is to be installed.
2. Check the line voltage and the heat-tracing load to ensure that the thermostat ratings are not exceeded.
3. Mount the unit in a position that prevents condensation from draining into the enclosure from the connecting conduit (see diagram at left).


**Positioning**

4. Mount ambient-sensing units in the area exposed to the coldest temperature and the most wind. **Do not mount on the side of a warm building or in a location that is exposed to warm air currents or direct sunlight.**


**Setting and Adjusting**

5. Set the thermostat dial to the desired temperature and finish wiring.

**Wiring**

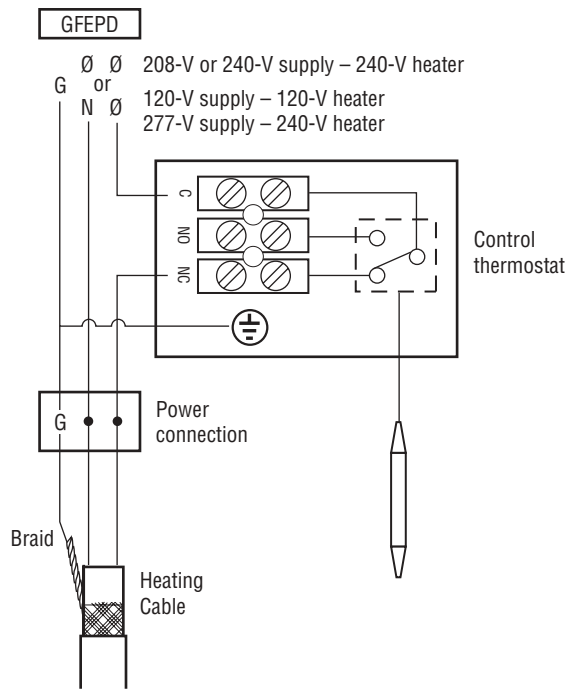

**Figure 1. Heat-tracing control**

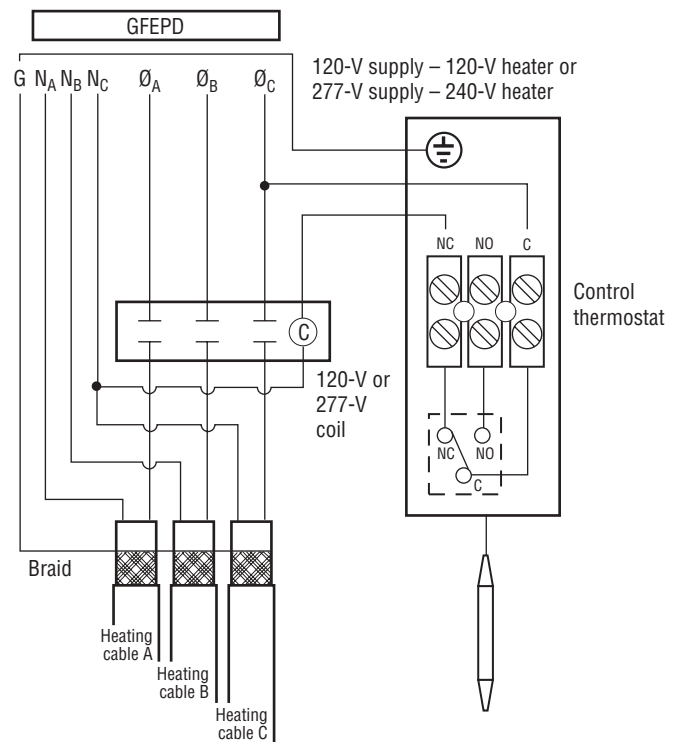

**Figure 2. Controlling a contactor**

For switching heat-tracing loads greater than 22 A or switching multiple heat-tracing circuits.

**Worldwide Headquarters**  
**Tyco Thermal Controls**  
 300 Constitution Drive  
 Menlo Park, CA 94025-1164  
 USA  
 Tel (800) 545-6258  
 Fax (650) 474-7517  
 Fax-on-Demand (800) 329-4494  
 info@tycothermal.com  
 www.tycothermal.com

**Important:** All information, including illustrations, is believed to be reliable. Users, however, should independently evaluate the suitability of each product for their particular application. Tyco Thermal Controls makes no warranties as to the accuracy or completeness of the information, and disclaims any liability regarding its use. Tyco Thermal Controls' only obligations are those in the Tyco Thermal Controls Standard Terms and Conditions of Sale for this product, and in no case will Tyco Thermal Controls or its distributors be liable for any incidental, indirect, or consequential damages arising from the sale, resale, use, or misuse of the product. Specifications are subject to change without notice. In addition, Tyco Thermal Controls reserves the right to make changes—without notification to Buyer—to processing or materials that do not affect compliance with any applicable specification.