


## T2QuickNet

- The T2QuickNet mat -with pre-mounted heating cable is available in ready-made lengths.
- Very thin; no need to raise thresholds.
- Mat with self-adhesive backing; no need for glue or staples.
- Is laid directly in the filler.
- Needs only one cold lead.

### Ideal for renovation

The heating mat can be embedded in a thin layer of filler on the existing floor (wood, plastic or concrete). It requires only a 3 - 5 mm cover + floor thickness.

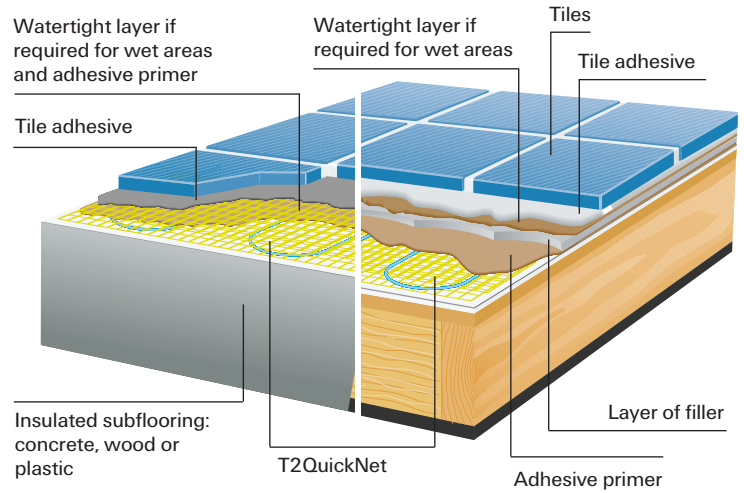

### Key installation steps



**Mat installation**


Roll out the heating mat on the clean floor.

Apply a layer of adhesive primer.




**Filler layer**

Carefully apply an even layer of filler on top of the cable. Let it cure according to instructions.

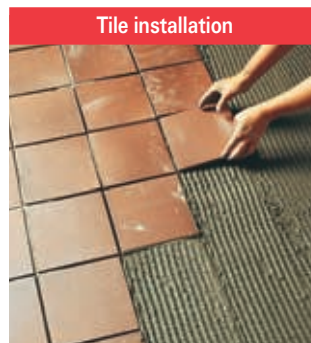

**Tile installation**

Spread the tile adhesive and then lay out and join the tiles. In wet areas, apply a watertight coating before the tile adhesive.

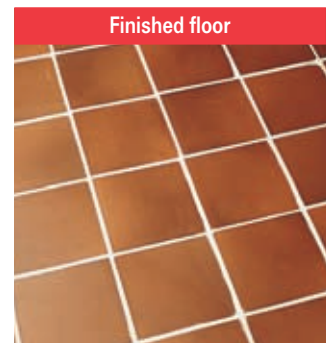

**Finished floor**

All passage areas; corners and angles are sealed with sanitary silicon. Allow the floor to cure completely before turning the floor heating system on.

### Notes:

- All electrical work must be performed by an authorized electrician
- In general it is to be ensured that only floor coverings which are suitable for floor heating are employed.

Refer to the detailed installation instructions provided with all T2 products